


DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

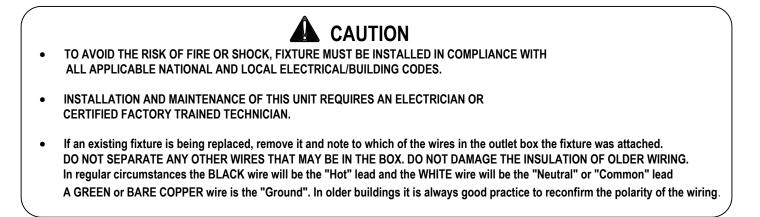


NOTICE

- The important safeguards and instructions outlined on this sheet cannot cover all possible conditions and situations that may
 occur. It must be understood that common sense, caution and care factors that cannot be built into any product.
 Caution and care must be supplied by the person(s) installing, operating and caring of this lighting fixture.
- This fixture is design to be mounted on a correctly installed standard round or octagon box or a through wiring box with a
 plaster frame. The box must be securely mounted to the structure of the building. The crossbar and hardware
 supplied should be used. Directly mounting the fixture to the outlet box may make it impossible to correctly align the fixture.

FIXTURE PREPARATION

1. Remove the fixture, glass/metal prism, parts and parts bag(s) from the carton.

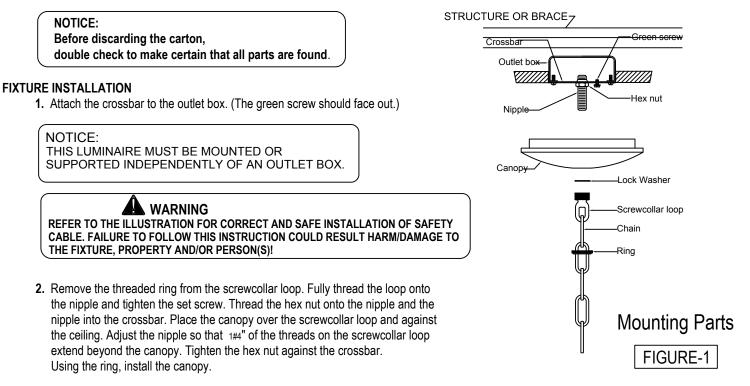

3. Open end links of chain and attach the chain to the screwcollar loop. Assemble the lower ring to the upper ring with the chains provided. Hang the fixture on the chain at the desired height. Remove excess chain. Unscrew the threaded ring. Allow the ring and canopy to slide down the chain to the fixture.

WARNING

The use of chain pliers for opening and closing chain is required. The use of tools other than the chain pliers may damage the chain link resulting in a failure which can cause harm to the fixture, property and/or person(s)!

- 4. Thread the lead wires and ground wires (first) through the threaded ring, then the canopy and up through alternating links of the chain until the ceiling is reached.
- 5. Measure 6" of lead wire beyond the top of the chain. Cut off the excess wire. Strip the insulation off the ends of the leads exposing approx. $\frac{1}{2}$ " of wire. Twist the strands of wire together. Push the leads and the ground wire up through the screwcollar loop and nipple and into the outlet box.
- 6. Fasten the ground wire to the green or bare copper wire in the outlet box or the green screw on the crossbar.



Never fasten the ground wire to the black or "hot" wire! Failure to follow this instruction could result in serious injury or death!

7. Fasten the lead with the ridge(s) to the white wire in the outlet box. Fasten the wires together with an approved fastener (wire nut). Starting about 1' below the fastener, tightly wrap the connection with electrical tape so that the tape seals the end of the fastener.

Make sure that there is no exposed wire or strands that could cause a dangerous short circuit!


- Electrical tape

-Approved fastener (wire nut)

- 8. Connect the smooth fixture lead to the black wire in the outlet box. Fasten the joined wires as in step 7.
- 9. Slide the canopy and screwcollar ring up the chain and secure the canopy to the ceiling.
- Detach the bowl by unscrewing the ball nuts. Place the glass finial (F) into the hole of the bowl. Attach the ball using the ball nuts. See Figure-2.
- 11. Insert the loose glass and metal scrolls into their respective dowels, folowing the scroll diagram (Figure-3).
- 12. Install the lamps (light bulbs). NOTE: This fixture is rated for 60 watt type B, BA, C or CA lamps.



13. Restore power to circuit at breaker or fuse box.

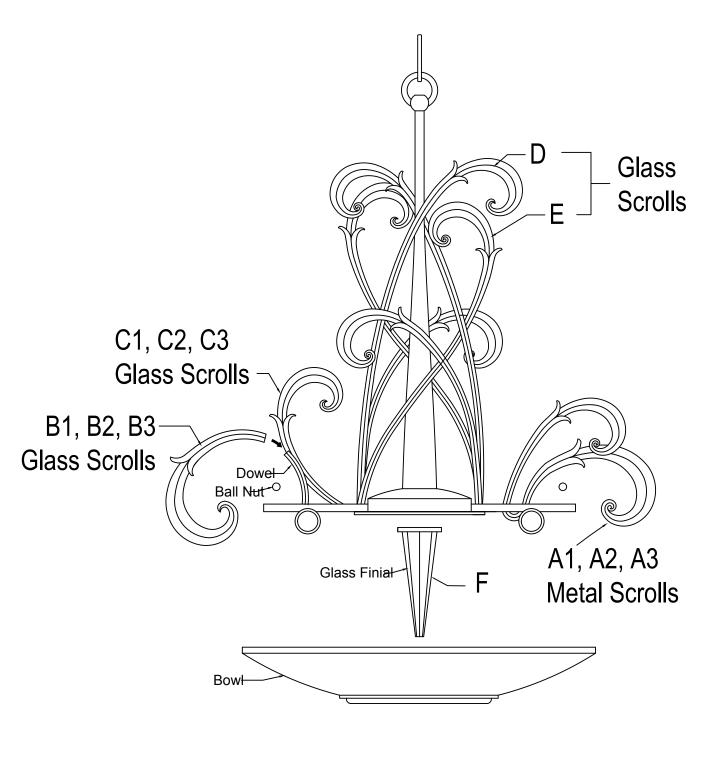

Scroll Diagram Front View

