

H428101, H428604 GISELLE SCONCE

ASSEMBLY AND MOUNTING INSTRUCTIONS

GENERAL

- WARNING-DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE. TURN OFF THE ENTIRE ELECTRICAL CIRCUIT TO WHICH THE LIGHTING FIXTURE IS ATTACHED
- INSTALLATION AND MAINTENANCE OF THIS FIXTURE SHOULD BE COMPLETED BY A LICENSED ELECTRICAN
- FAILURE TO INSTALL FIXTURE CORRECTLY COULD RESULT IN SERIOUS INJURY OR DEATH
- READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION.

- IF AN EXISTING FIXTURE IS BEING REPLACED, REMOVE IT AND NOTE TO WHICH WIRE IN THE OUTLET BOX THE ORIGINAL FIXTURE WAS ATTACHED.
- BEFORE DISCARDING THE CARTON DOUBLE CHECK THE PACKAGING TO MAKE SURE ALL PARTS HAVE BEEN FOUND.
- THIS FIXTURE WAS DESIGNED TO BE MOUNTED TO AN OCTAGON OUTLET BOX. THE BOX MUST BE SECURELY MOUNTED TO THE STRUCTURE OF THE BUILDING.

INSTALLATION

STEP 1.	Pull the wires out from the outlet box, and install mounting plate onto the outlet box using the (2) mounting screws.		CORRECTLY COULD RESULT IN SEROIUS INJURY OF DEATH!
STEP 2.	Fasten bare ground wire to ground wire from the wall outlet	STEP 5.	Carefully place connections back into the outlet box.
	box (usually green or copper color) or connect ground wire to green screw on the mounting plate.	STEP 6.	Place back plate over the mounting plate and secure with set screws.
STEP 3.	Connect the neutral (white) fixture wire coming from the fixture base to neutral (usually white) outlet wire. Fasten both wires together with a plastic wire nut and tightly wrap	STEP 7.	Install the lamp(s). H428101 is rated for 60 watt type G lamp. H428604 is rated for 6 watt LED type G lamp. DO NOT EXCEED RECOMMENDED WATTAGE!
	the wire nut with electrical tape.	STEP 8.	Assemble the glass to the socket then secure with end
STEP 4.	Repeat the previous step with the hot (black wires). Make sure there are no exposed wires or strands that could	STEP 9.	balls . Restore power to the circuit at breaker or fuse box.

DIMMING

The fixture can be controlled by a wall dimming device. Only use triac/electronic dimmer. Make sure carton is marked for use with LED compact fluorescent-incandescent light source only. These can be

cause a dangerous short circuit.

provided by your local electrical distributor, home center, or hardware store.

CLEANING


Please clean with a soft, dry cloth ONLY! Do not use cleaning products.

FAILURE TO CONNECT THE APPROPRIATE WIRES



H428101, H428604 GISELLE SCONCE

ASSEMBLY AND MOUNTING DIAGRAM

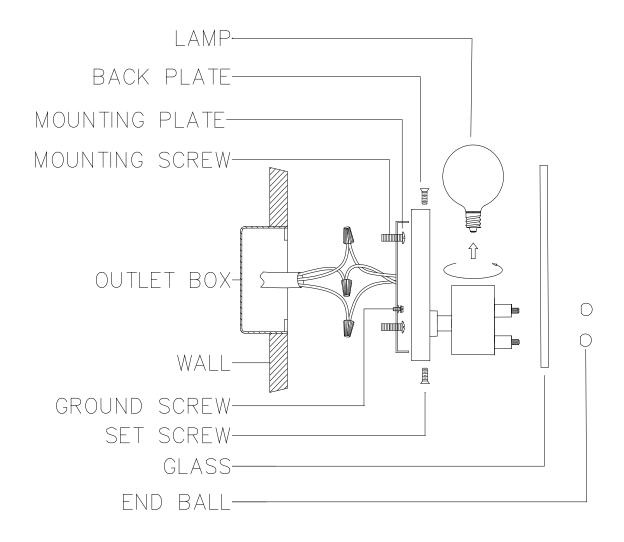

WIRE NUT/TAPING DIAGRAM

