
B3292 INSTALLATION INSTRUCTIONS



🛦 warning

DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE. READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

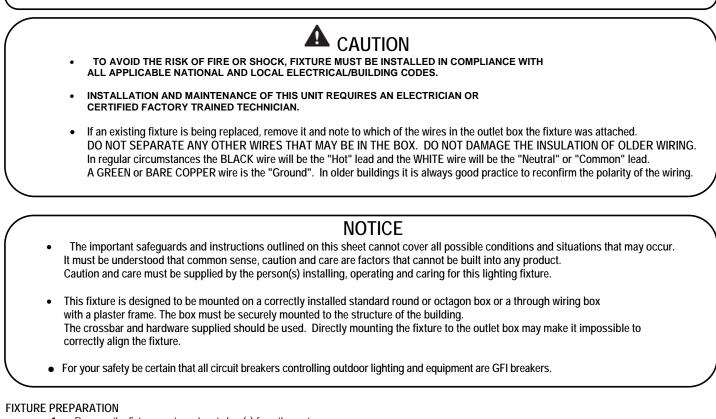

1. Remove the fixture, parts and parts bag(s) from the carton.

NOTICE:

Before discarding the carton, double check to make certain that all parts are found.

FIXTURE INSTALLATION

- 1. (Starting at the back) thread the 2 mounting screws into the mounting bar. (The green screw is in the front) Attach the mounting bar to the outlet box.
- Thread the small hex nuts onto the nipple. Adjust the screws of nipple so that they extend about 3/16" beyond the back plate of the fixture. Lock the hex nuts against the mounting ring.
- 3. Fasten the ground wire to the green or bare copper wire in the outlet box or to the green screw on the crossbar.

A WARNING

Never fasten the ground wire to the black or "hot" wire! Failure to follow this instruction could result in serious injury or death! 4. Fasten the white fixture lead to the white wire in the outlet box. Fasten the wires together with an approved fastener (wire nut). Starting about 1' below the fastener, tightly wrap the connection with electrical tape so that the connection seals the end of the fastener.

	WARNING e sure that there is no exposed wire or strands that d cause a dangerous short circuit !	
• 11	electrical tape approved fasten	er
	(wire nut)	

- Connect the black fixture lead to the black wire in the outlet box. Fasten the joined wires as in step 4
- 6. To prevent water from flowing into the outlet box, put a bead of weatherproof caulking or silicone sealant around the inside edge of back. Leave a 1/2" gap at the bottom of back to allow condensed moisture to drain.
- 7. Fasten the fixture to the wall use ball end cup.
- 8. Install side glass to the cage, in stall the door glass to the door.
- 9. Install the lamps (light bulbs). NOTE: This fixture is rated for Max 60 watt type B lamps.



- 10. Place the center glass on the socket, and close the door.
- 11. Restore power to circuit at breaker or fuse box.

