
F4316 INSTALLATION INSTRUCTIONS



WARNING

DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE.

READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

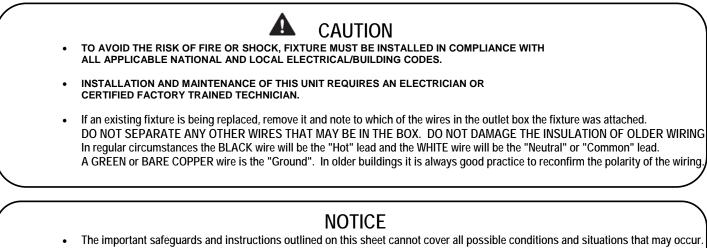

- The important safeguards and instructions outlined on this sheet cannot cover all possible conditions and situations that may occu
 It must be understood that common sense, caution and care are factors that cannot be built into any product.

 Caution and care must be supplied by the person(s) installing, operating and caring for this lighting fixture.
- This fixture is designed to be mounted on a correctly installed standard round or octagon box or a through wiring box with a plaster frame. The box must be securely mounted to the structure of the building. The crossbar and hardware supplied should be used. Directly mounting the fixture to the outlet box may make it impossible to correctly align the fixture
- For your safety be certain that the circuit breakers controlling outdoor lighting and equipment be GFI breakers

FIXTURE PREPARATION

1. Remove the fixture, parts and parts bag(s) from the carton.


NOTICE:

Before discarding the carton, double check to make certain that all parts are found.

2. This fixture is designed to be mounted on a correctly installed standard round or octagon box or a through wiring box with a plaster frame. The box must be securely mounted to the structure of the building. The crossbar and hardware supplied should be used.

FIXTURE INSTALLATION

- Slide crimp-on cable clamps onto the SAFETY CABLE. The outlet box may have to be removed for this step. Loop the SAFETY CABLE over the structure or brace. Thread the long end of the SAFETY CABLE back through the crimp-on cable clamps. Adjust the cable and tightly set the clamps. Thread the SAFETY CABLE into the outlet box (from the top). Reinstall the outlet box if necessary.
- Attach the crossbar to the 10-24 STUDS in the outlet box. DO NOT USE THE BOX "EARS" Thread nipple into the crossbar and hex nut onto the nipple. Place the canopy against the ceiling. Adjust the nipple so that 1/4" of thread is exposed beyond the canopy. Tighten the hex nut against the crossbar.
- **3.** Thread the **SAFETY CABLE** down through one of the nipple and screwcollar loop. Temporarily install the canopy.
- Open end links of chain and attach the chain to the screwcollar loop. Close the top link of chain. Hang the fixture on the chain at the desired height. Remove excess chain. Close the bottom link of chain.

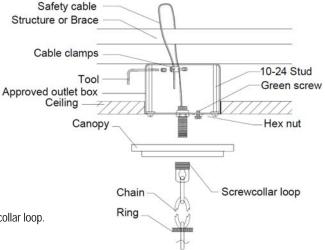

SEE PAGE 2 FOR SUGGESTED FIELD CONSTRUCTED SUPPORT

- 5. Unscrew the ring from the screwcollar loop. Let the ring and canopy slide down the chain to the top of the fixture. Structure or support Hex nut and Thread the lead wires and ground wire (first) through the fender washer ring and then the canopy. Thread the wires up through alternating links of the chain to the outlet box. Crimp on cable clamp 6. Measure 6" of lead wire beyond the end of the chain. Cut off excess wire. Strip the insulation off the ends of the leads Tool exposing approx. 1/2" of wire. Twist the strands of wire together. Electric supply Push the leads and ground wire up through screwcollar loop and nipple into the outlex box. Safety Cable Outlet box 7. Fasten the ground wire to the green or bare copper wire in the outlet box or to the green screw on the crossbar. A WARNING Cast iron hickey Hex nut Never fasten the ground wire to the black or "hot" wire! Failure to follow this instruction could result in 1/4IP nipple Canopy serious injury or death! 8. Fasten the white fixture lead to the white wire in the outlet box. Screwcollar loop Fasten the wires together with an approved fastener (wire nut). Starting about 1" below the fastener, tightly wrap the connection with electrical tape so that the connection seals the end of the fastener. Chain WARNING Ring Make sure that there is no exposed wire or strands that could cause a dangerous short circuit ! -electrical tape Safety cable approved fastener Structure or Brace (wire nut) 9. Connect the black fixture lead to the black wire in the outlet box. Fasten the joined wires as in step 8. Cable clamps 10-24 Stud 10. Thread the SAFETY CABLE down through alternating links of chain. Tool Green screw Approved outlet box Ceiling 11. Slide the canopy and ring up the chain to the outlet box. 11 Secure the canopy in place against the ceiling. Canopy Hex nut 12. Thread a crimp-on cable clamp onto the SAFETY CABLE. Loop the SAFETY CABLE through the fixture loop. 13. Thread the SAFETY CABLE back through the crimp-on cable clamp. Screwcollar loop Chain Pull cable snug and tightly crimp cable clamp in place. Ring DO NOT OVER TIGHTEN THE CABLE AND CAUSE THE CHAIN TO SAG ! Remove excess cable approx 1/2" beyond the clamp. 14. Use of stem is optional. Assemble the crystal accessories according to the line drawing. 15. Install the lamps (light bulbs) 16. NOTE: This fixture is rated for Max 60 watt type B lamp... WARNING DO NOT EXCEED RECOMMENDED WATTAGE!
 - 17. Restore power to circuit at breaker or fuse box.

