



DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

CAUTION

- TO AVOID THE RISK OF FIRE OR SHOCK, THE MUST BE INSTALLED IN COMPLIANCE WITH ALL APPLICABLE NATIONAL AND LOCAL ELECTRICAL/BUILDING CODES.
- INSTALLATION AND MAINTENANCE OF THIS UNIT REQUIRES AN ELECTRICIAN OR CERTIFIED FACTORY TRAINED TECHNICIAN.
- If an existing fixture is being replaced, remove it and note to which of the wires in the outlet box the fixture was attached.
 DO NOT SEPARATE ANY OTHER WIRES THAT MAY BE IN THE BOX. DO NOT DAMAGE THE INSULATION OF OLDER
 WIRING. In regular circumstances the BLACK wire will be the "Hot" lead and the WHITE wire will be the "Neutral" or "Common"
 lead. The GREEN or BARE COPPER wire is the "Ground". In older buildings it is always a good practice to reconfirm the polarity
 of the wiring.

NOTICE

- The important safeguards and instructions outlined on this sheet cannot cover all possible
 conditions and situations that may occur. It must be understood that common sense,
 caution and care factors that cannot be built into any product. Caution and care must be
 supplied by the person(s) installing, operating and caring of this lighting fixture.
- This fixture is design to be mounted on a correctly installed standard round or octagon box
 or a through wiring box with a plaster frame. The box must be securely mounted to the
 structure of the building. The crossbar and hardware supplied should be used.Directly
 mounting the fixture to the outlet box may make it impossible to correctly align the fixture.

FIXTURE PREPARATION

1. Remove the fixture, shade and parts bag(s) from the carton.

NOTICE:

Before discarding the carton, double check to make certain that all parts are found.


FIXTURE INSTALLATION

- 1. Attach the crossbar to the outlet box. (The green screw should face out).
- 2. Thread the nipple into the mounting bar. Thread the hex nut onto the nipple. Adjust the nipple so it extend ³/₁₆" beyond the back plate of the fixture. Lock the hex nuts against the crossbar.
- **3.** Fasten the bare ground wire to the green or bare copper wire in the outlet box (if outlet box is plastic) or to the green screw on the crossbar.



WARNING

Never fasten the ground wire to the brown or "hot" wire! Failure to follow this instruction could result in serious injury or death!

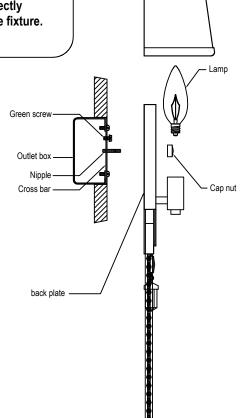


Shade

4. Fasten the white fixture lead to the white wire in the outlet box. Fasten the wires together with an approved fastener (wire nut). Starting about 1" below the fastener, tightly wrap the connection with electrical tape so that the tape seals the end of the fastener.



WARNING


Make sure that there is no exposed wire or strands that could cause serious injury or death!



- **5.** Connect the black fixture lead to the black wire in the outlet box. Fasten the joined wires as in step 4.
- 6. Using cap nut, fasten the fixture to the outlet box.
- 7. Install the lamps (light bulbs). NOTE: This fixture is rated for 40 watt candelabra based type B, BA, C or CA lamp.



- 8. Screw the shade into place.
- 9. Restore power to circuit at breaker or fuse box.

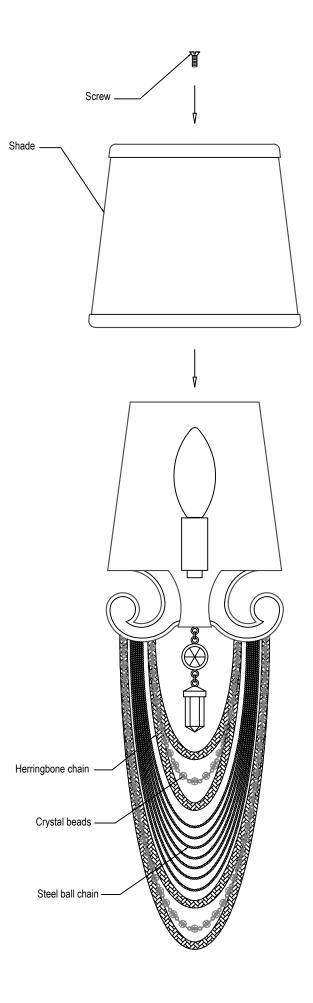

Page 2 of 2 012313ID