201-46 INSTALLATION INSTRUCTIONS

GENERAL

- 1. To insure the success this fixture installation, the following instructions and diagram(s) should be read and understood.

 All electrical connections must be made in accordance with the National Electric Code and local codes and ordinances.

 If you are uncertain of the methods of installing electrical wiring and lighting fixtures, secure the services of a qualified licensed electrician.
- 2. TOOLS NEEDED: Chain pliers, flat-blade screwdriver, adjustable wrench or slip-joint pliers, wire cutter/stripper, electrical current tester, stepladder and electrical tape.

NOTE: The important safeguards and instructions outlined on this sheet cannot cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors that cannot be built into any product.

Caution and care must be supplied by the person(s) installing, operating and caring for this lighting fixture.

INSTALLATION PREPARATION

- 1. TURN OFF THE ENTIRE ELECTRICAL CIRCUIT TO WHICH THE LIGHTING FIXTURE IS TO BE ATTACHED.


 Move the appropriate circuit breaker to the "off" position or completely remove the fuse controlling the circuit.
- 2. If an existing fixture is being replaced, remove it and note to which of the wires in the outlet box the fixture was attached. DO NOT SEPARATE ANY OTHER WIRES THAT MAY BE IN THE BOX. DO NOT DAMAGE THE INSULATION OF OLDER WIRING. In regular circumstances the BLACK wire will be the "Hot" lead and the WHITE wire will be the "Neutral" or "Common" lead. A GREEN or BARE COPPER wire is the "Ground". In older buildings it is always good practice to reconfirm the polarity of the wiring.
- 3. This fixture is designed to be mounted on a correctly installed, standard round or octagon box or a through wiring box with a plaster frame. The box must be securely mounted to the structure of the building.
- Remove the fixture, shade and parts bag(s) from the carton.Before discarding the carton, double check to make certain that all parts are found.


FIXTURE INSTALLATION

- 1. Attach the crossbar to the outlet box. (The green screw should face the floor).
- 2. Remove the threaded ring from the screwcollar loop. Fully thread the loop onto the nipple and tighten the set screw. Thread the hex nut onto the nipple and the nipple into the crossbar. Place the canopy over the screwcollar loop and against the ceiling. Adjust the nipple so that 1/4" of threads on the screwcollar loop extend beyond the canopy. Tighten the hex nut against the crossbar. Using the ring, install the canopy.
- 3. Open the end links of the chain. Attach the chain to the screwcollar loop.
- 4. Place the shade onto the notches on the fixture body.
- 5. Hang the fixture body on the chain.

 Adjust the chain to the desired height.
- **6.** Remove the excess chain. Close the chain links.
- Unscrew the ring from the screwcollar loop.Allow the ring and canopy to slide down the chain to the fixture body.
- 8. Thread the lead wires and ground wire (first) through the threaded ring, then the canopy and up through alternating links of the chain until the ceiling is reached.
- 9. Measure 6" of lead wire beyond the top of the chain. Cut off the excess wire. Strip the insulation off the ends of the leads exposing approx. 1/2" of wire. Twist the strands of wire together. Push the leads and ground wire up through the screwcollar loop and nipple and into the outlet box.
- 10. Fasten the ground wire to the green or bare copper wire in the outlet box or the green screw on the crossbar.
 NEVER FASTEN THE GROUND WIRE TO THE BLACK OR "HOT" WIRE!
 FAILURE TO FOLLOW THIS INSTRUCTION COULD RESULT
 IN SERIOUS INJURY OR DEATH!
- 11. Fasten the fixture lead with the ridge(s) to the white wire in the outlet box. Fasten the wires together with an approved fastener (wire nut) Starting about 1" below the fastener, tightly wrap the connection with electrical tape so that the tape seals the end of the fastener.
 Make sure that there is no exposed wire or strands that

could cause a dangerous short circuit!

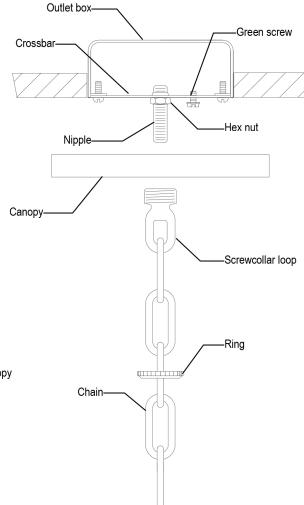



- **12.** Connect the smooth fixture lead to the black wire in the outlet box. Fasten the joined wires as in step 11.
- 13. Slide the canopy and screwcollar ring up the chain and secure the canopy to the ceiling.
- **14.** Install the lamps (light bulbs).

NOTE: This fixture is rated for 60 watt type B, BA, C or CA lamps.

DO NOT EXCEED RECOMMENDED WATTAGE!

15. Restore power to circuit at breaker or fuse box.

