

## 250-12 TAFFETA TALL SCONCE INSTALLATION INSTRUCTIONS

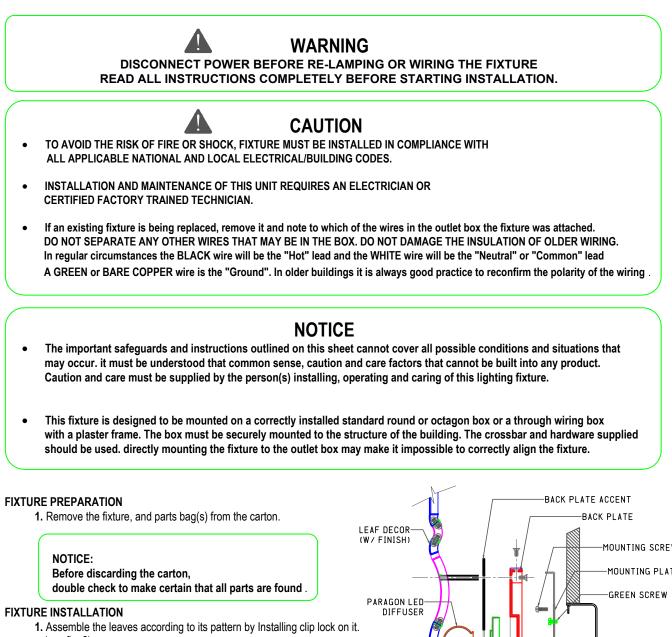

- (see fig. 2)
- Assemble the fixture all together as one, attach the accent to the back plate together with led socket, Then the ball diffuser to the socket, and finally, the decorated leaf to back plate and lock it tightly with screws on its stands. (see figure 1)
- **3.** Attach the mounting ring to the outlet box using the mounting screws. (The green screw should face out).
- 4. Fasten the ground wire to the green or bare copper wire in the outlet box or the green screw on the mounting ring.

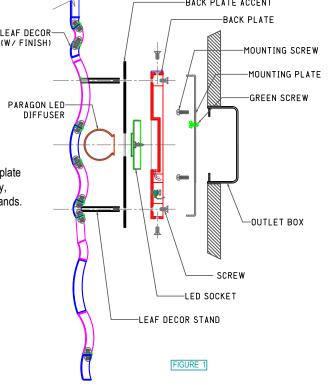

WARNING Never fasten the ground wire to the black or "hot" wire! Failure to follow this instruction could result in serious injury or death!

5. Fasten the white fixture lead of the LED light to the white wire in the outlet box. Fasten the wires together with an approved fastener (wire nut) Starting about 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener.

WARNING Make sure that there is no exposed wire or strands that could cause a dangerous short circuit!

— Electrical tape

Approved fastener (wire nut)

- 6. Connect the black fixture lead of the LED light to the black wire in the outlet box. Fasten the joined wires as in step 3.
- 7. Using the flat head screws, loosely fasten the fixture to the mounting ring. Rotate and align the back plate as necessary . Tighten the flat screws.
- 8. Restore power to circuit at breaker or fuse box.

