
266-03 SOFIA 3 LTS PENDANT INSTALLATION INSTRUCTIONS



WARNING

DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE

READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

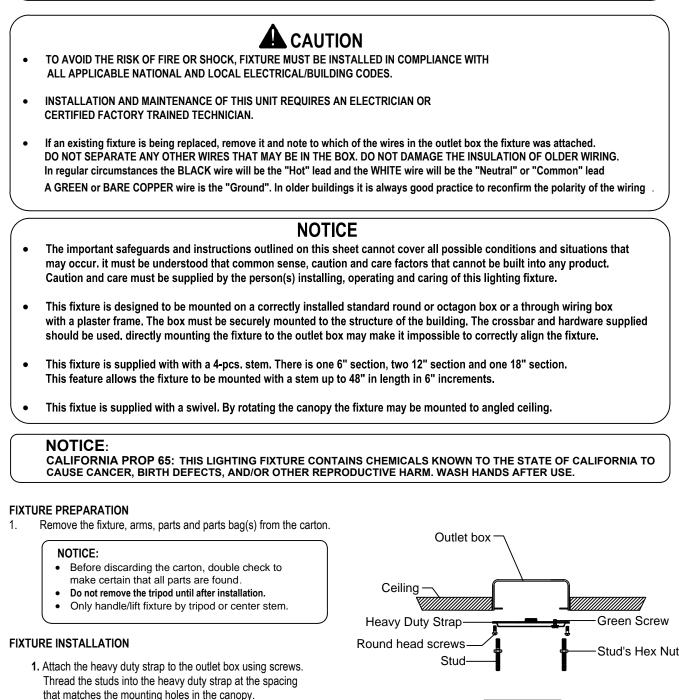



- 2. Determine the overall desired length of the fixture. Assemble the adjustable stems one at a time onto the fixture leads. Tape the end of the leads to a stiff wire (coat hanger) to aid in pulling them through the stems. Place the canopy onto the stem. Assemble the top stem section, decorative breaker, fixture stem and swivel. Place the swivel block over the nipple of the canopy and thread the hex nuts onto them.
- **3.** Cut off the excess fixture wire 6" beyond the canopy. Strip 1/2" of insulation from the ends of the wire. Twist the wire strands together.
- Fasten the ground wire to the green or bare copper wire in the outlet box or the green screw on the heavy duty strap.



Never fasten the ground wire to the black or "hot" wire! Failure to follow this instruction could result in serious injury or death!

5. Fasten the white fixture lead to the white wire in the outlet box. Fasten the wires together with an approved fastener (wire nut). Starting about 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener.

Make sure that there is no exposed wire or strands that could cause a dangerous short circuit!

Electrical tape Approved fastener (wire nut)

- **6.** Connect the black fixture lead to the black wire in the outlet box. Fasten the joined wires as in step 6.
- 7. Using the ball nuts, loosely fasten the fixture to the heavy duty strap. Rotate and align the canopy as necessary. Tighten the ball nuts.
- **8.** Install the frond glass in each stem. Lock them using the female stamped clip, theaded rod and ball nut. (See Figure-03)
- 9. Install the lamps. (type-B lamp)

NOTICE: This fixture is rated for 60w type-B lamp.

WARNING DO NOT EXCEED RECOMMENDED WATTAGE!

9. Restore power to circuit at breaker or fuse box.

