
## 293-13 PROSECCO EXTRA LARGE WALL SCONCE INSTALLATION INSTRUCTIONS



## 

DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

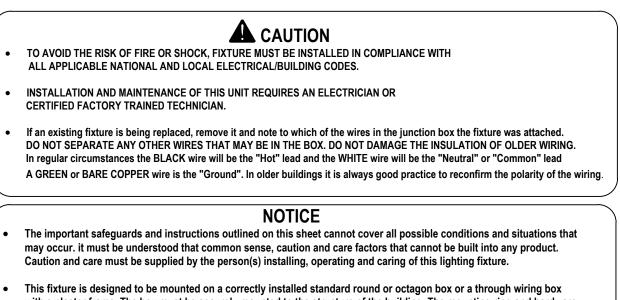

with a plaster frame. The box must be securely mounted to the structure of the building. The mounting ring and hardware supplied should be used. directly mounting the fixture to the junction box may make it impossible to correctly align the fixture.

### NOTICE:

CALIFORNIA PROP 65: THIS LIGHTING FIXTURE CONTAINS CHEMICALS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS, AND/OR OTHER REPRODUCTIVE HARM. WASH HANDS AFTER USE.

THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX

#### **FIXTURE PREPARATION**

1. Remove the fixture, parts and parts bag(s) from the carton.

#### NOTICE:

- Before discarding the carton, double check to
- make certain that all parts are found.

#### FIXTURE INSTALLATION


1. Attach the mounting ring to the juntion box using mounting screw. (the green screw should face out). (See Figure 01)

2. Fasten the ground wire to the green or bare copper wire in the junction box of the green screw on the mounting ring.




Never fasten the ground wire to the black or "hot" wire! Failure to follow this instruction could result in serious injury or death!

3. Fasten the white fixture lead to the white wire in the junction box. Fasten the wires together with an approved fastener (wire nut). Starting about 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener.

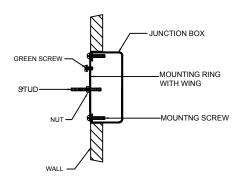



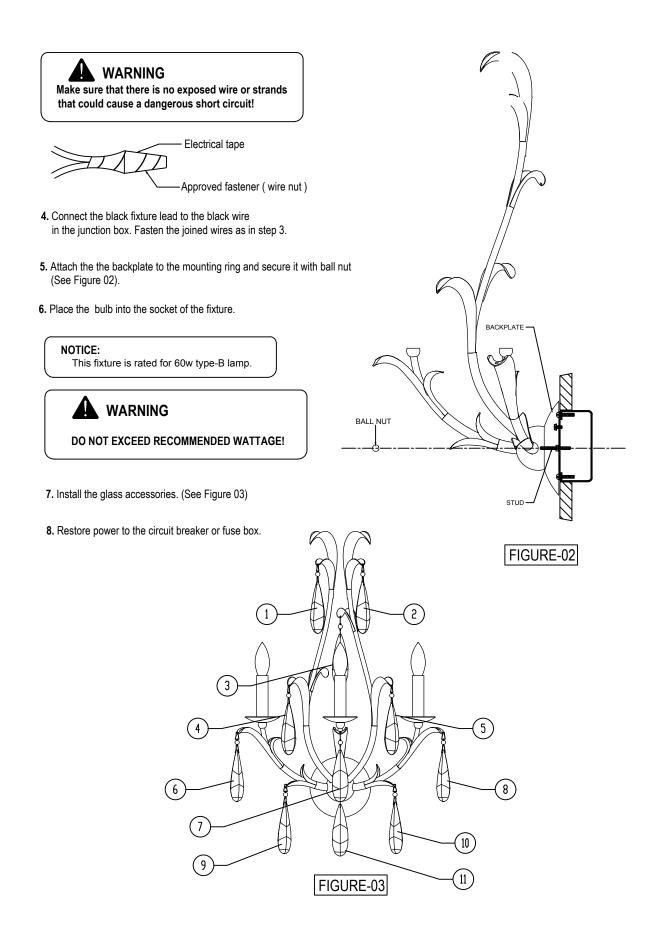

# R-HA83 293-13

ITEM NUMBER	PART NUMBER	DESCRIPTION
1	R-HA83-HRD	MDUNTING HARDWARE
2	R-HA83-GLS	GLASS
3	R-HA83-CAC	SOCKET COVER
4	R-HA83-ESK	SDCKET
5	R-HA83-FRM	FRAME

