
## 303-11 SIDCUP SHORT SCONCE INSTALLATION INSTRUCTIONS




## WARNING


DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE

READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

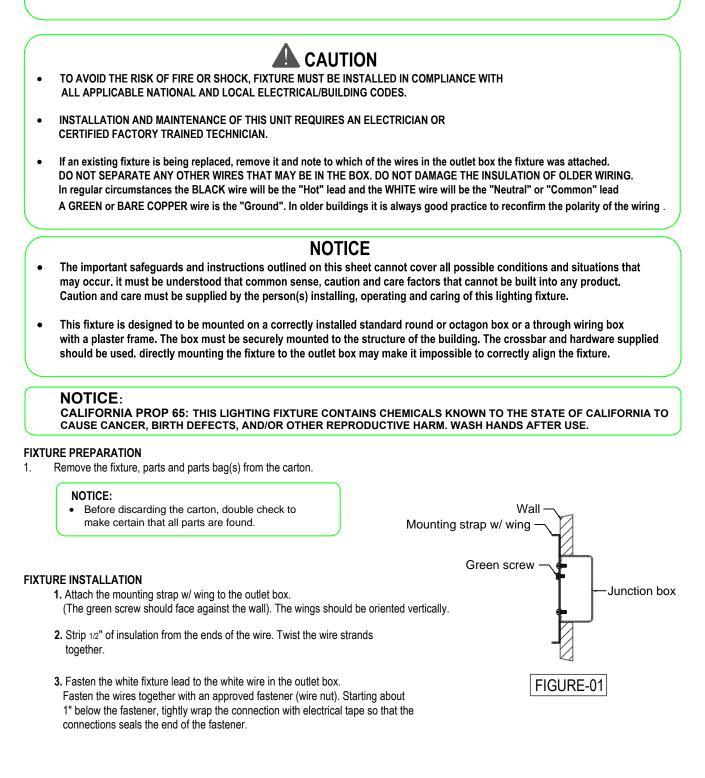

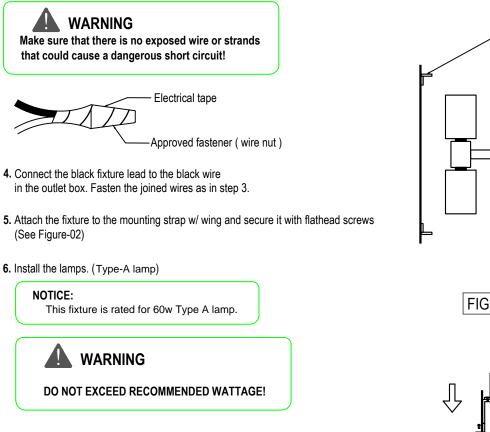

- 7. Attach the upper and lower frame to the fixture and secure them with screw. (See Figure-03)
- 8. Restore power to the circuit breaker or fuse box.

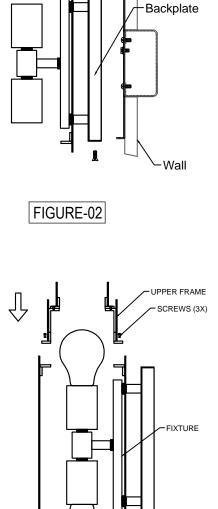

Fixture

Flat head screw

Mounting strap w/ wing



SCREWS (3X)

LOWER FRAME