


REQUIRED TOOLS:

Phillips Head Screwdriver
3/16" Drill Bit, Electric Drill (for Masonry Installation only)

INCLUDED HARDWARE:



Wall Bracket (x1)

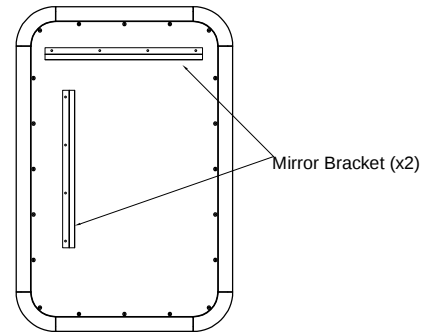


Wall Anchor (x4)




1 $\frac{11}{20}$ " Screw (x4)

INSTALLATION INSTRUCTIONS


1. Follow the assembly steps in order. Do not skip any steps.

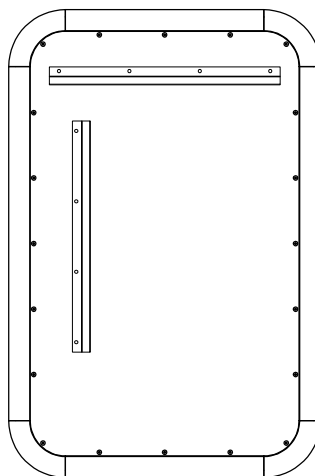

2. Please verify the hole position for wall anchor where the cleat will be install on the wall, use a leveling device to ensure the cleat is level.

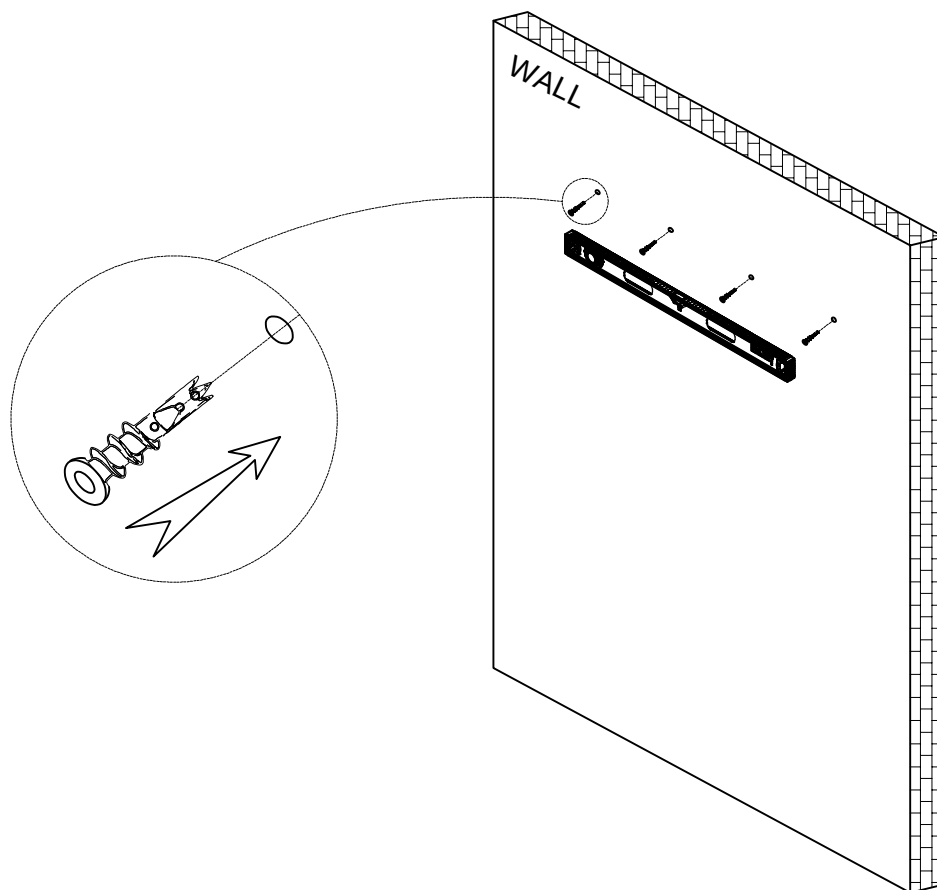


3. Put the cleat in where the wall anchor install before. Install the cleat with screw at wall anchor hole available by Phillips Head Screwdriver.

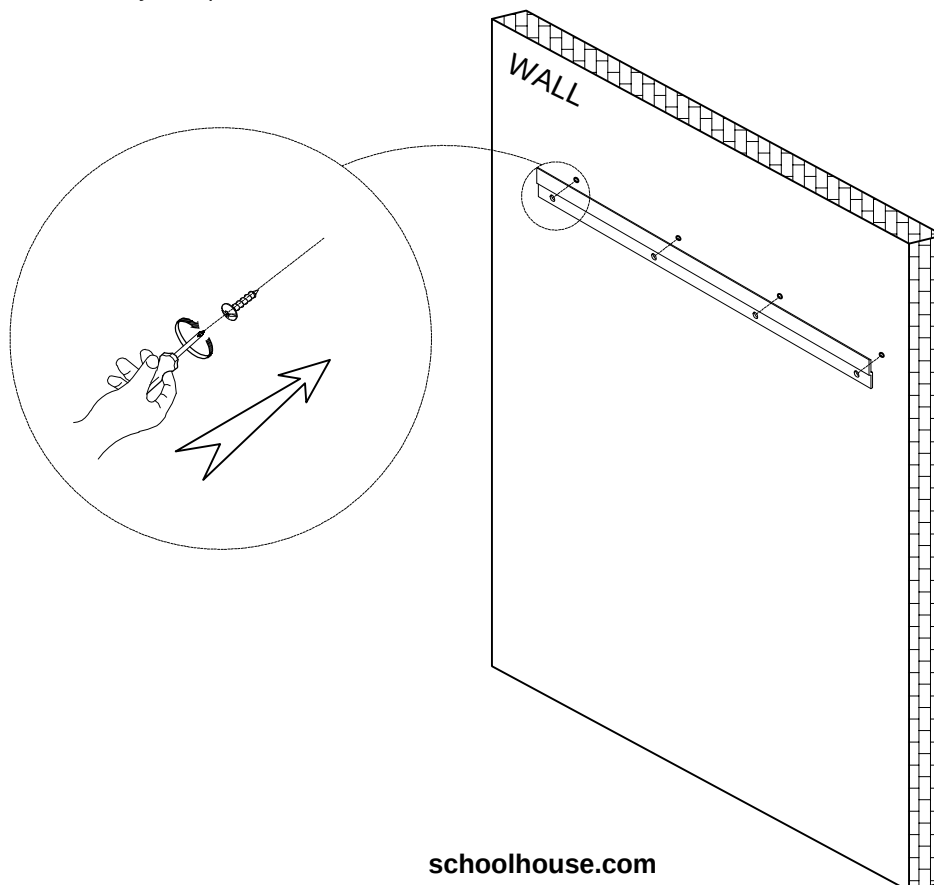


4. Place mirror against the wall above the wall cleat.
Carefully slide mirror down along the wall until it engages
with the wall cleat as shown.

There are two hanging option :

- Option 1: Horizontal direction
- Option 2: Vertical direction

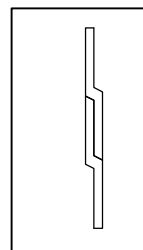

Option 1: Horizontal direction

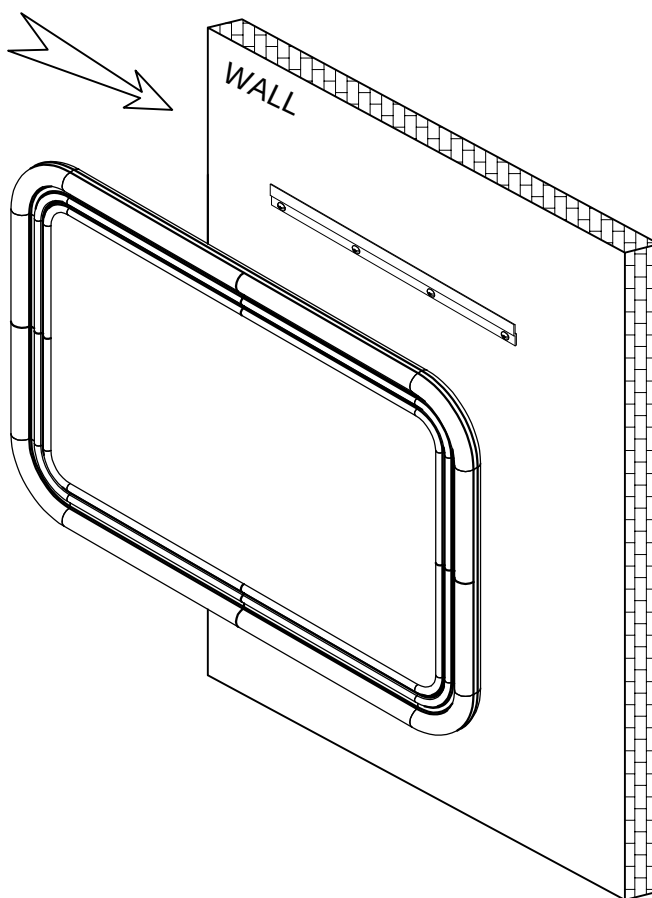

Option 2: Vertical direction

