


Torrey Wall Shelf

SCHOOLHOUSE


REQUIRED TOOLS:

Phillips Head Screwdriver
3/16" Drill Bit, Electric Drill (for Masonry Installation only)

INCLUDED HARDWARE:

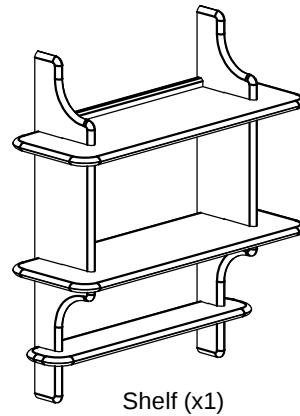


Wall Anchor (x2)



1 5/8" Screw (x2)

INSTALLATION INSTRUCTIONS


1. Follow the assembly steps in order. Do not skip any steps.

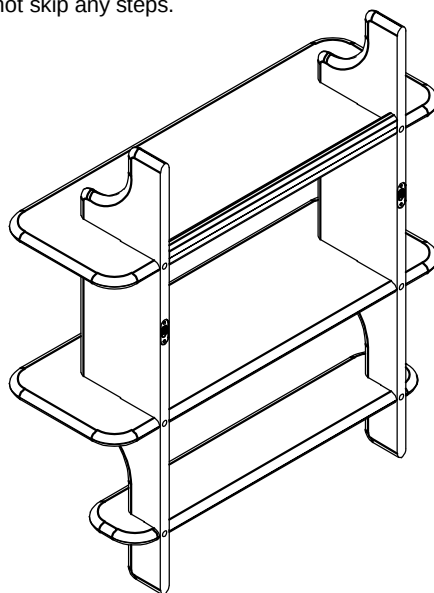


2. For installation in masonry drill 3/16" pilot hole.

NOTE:

- Position of the wall anchor 12 1/8" lower than your desired height of the shelf and mark mounting locations with a pencil. Use a leveling device to ensure the shelf is level..
- There is a 20" distance between the two holes.

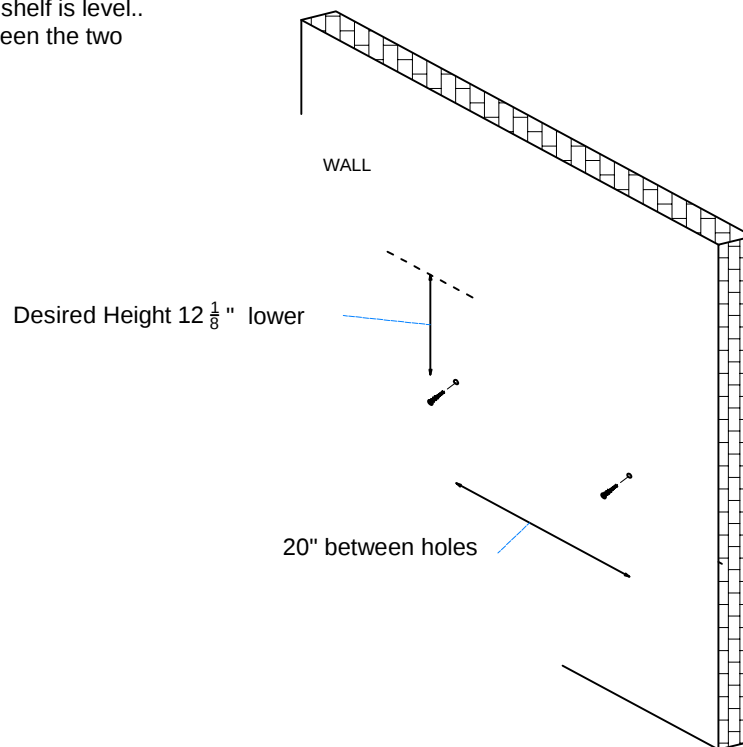

3. Leave a 1/8" gap between the screw head and the wall when screwing it in

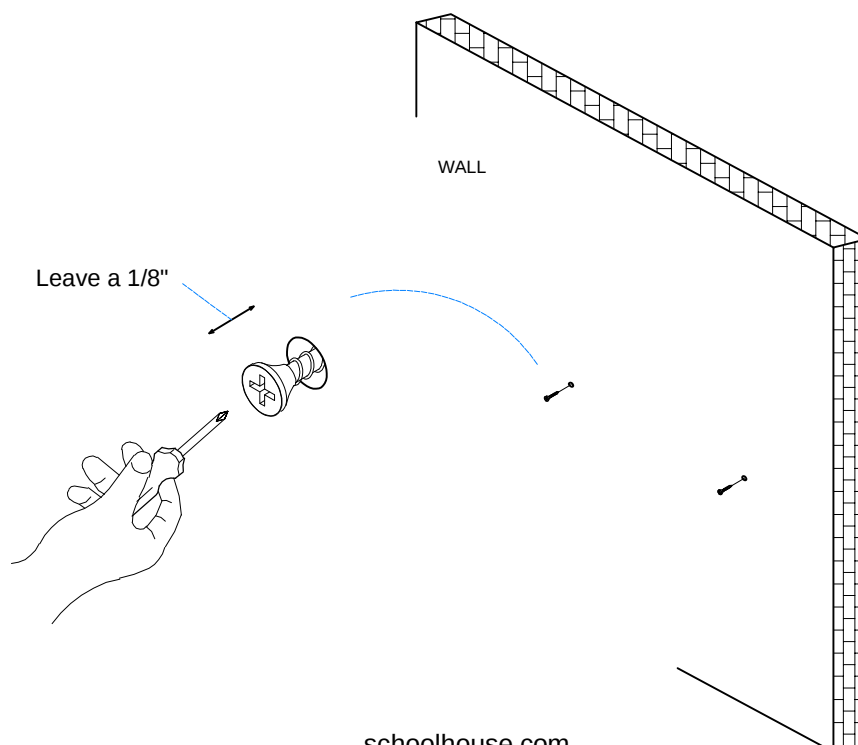

2. Place shelf against the wall above the wall screw.
Carefully slide shelf down along the wall until it engages with
the wall screw as shown.

