


NOTES:

- Professional installation required.
- Attaching shade assembly is recommended after fixture is wired and installed.

REQUIRED TOOLS:

- Phillips Head Screwdriver
- Flathead Screwdriver
- Wire Stripper
- Wire Rope Cutter
- Cable Stripper

INCLUDED HARDWARE:

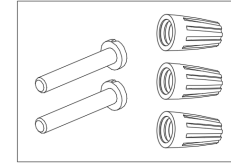

Installation Kit (x1)

INSTALLATION INSTRUCTIONS

1. Detach Circle Bracket from Canopy by removing Slotted Countersunk Screws. Reserve Screws for step 5.
2. Attach Circle Bracket to Junction Box using screws from Installation Kit.
3. Adjust the length of the power cord and the wire rope to achieve desired pendant length. Fix the power cord with Strain Relief Set Screw, and fix the wire rope with Cable Stop Set Screws. Ensure there is some slack in cord when wire rope is taught.
4. Wire the fixture to the junction box. Consult electrician, if necessary.
5. Attach Canopy to Circle Bracket with Slotted Countersunk Screws.
6. Thread Shade Assembly on to Shade Cover .
7. If the shade is not level, pull down Hub Cover. Loosen the Hub Set Screw, and adjust the wire rope through the Cable Gripper until the glass is level. Then tighten the Hub Set Screw, and then pull up Hub Cover.
8. Install bulb

