

Dolores Plug-In Sconce

SCHOOLHOUSE


NOTES:

The Pull Chain is removable and the lamp should be in the on position before disconnecting the Pull Chain.


REQUIRED TOOLS:

- Electric Drill
- 7/64" Drill Bit
- 1/4" Drill Bit
- Phillips Head Screwdriver

INCLUDED HARDWARE:




#8 Wood Screws (x2)



Drywall Anchors (x2)


INSTALLATION INSTRUCTIONS

1. Hold Dolores Plug-In Sconce against wall and then use pencil to mark the mounting location.

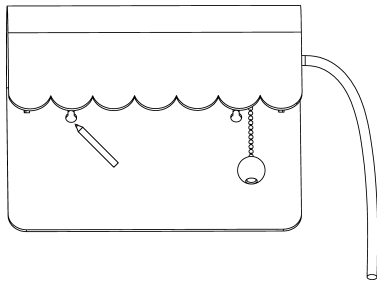


2. For stud locations, drill through drywall and stud using 7/64" Drill Bit.
3. For non-stud locations, drill through drywall using 1/4" Drill Bit. Clean up edge of hole so there is a flat surface for Anchor to sit flush against wall. Install Anchor into 1/4" holes with Screwdriver.
4. Using Screwdriver install #8 Wood Screws into pre-drilled 7/64" holes and/or Anchors leaving screw heads about 1/8" from wall.


Stud Locations:

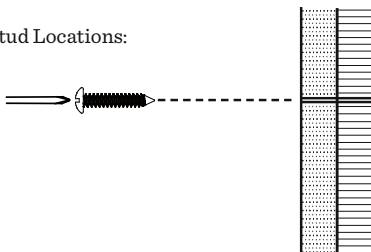

Non-Stud Locations:

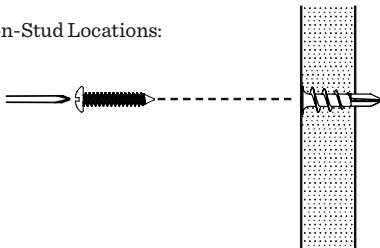

5. Align Sconce keyholes with Screws and slide Sconce down to mount. If Sconce is loose, remove from wall and tighten Screws. Install Sconce again to check fit. Repeat as necessary.

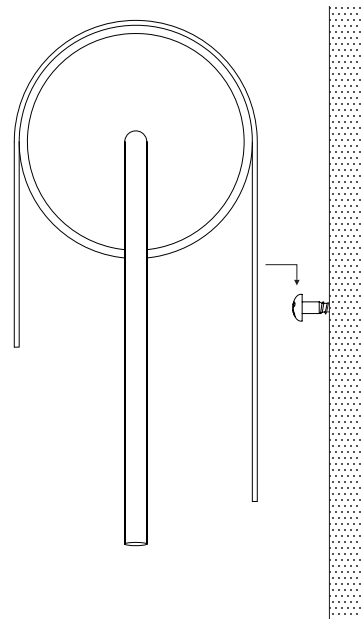

6. Install the Bulb. (not included).
7. Plug in and enjoy.