

## C4730 IDLE WILD FLUSH MOUNT INSTALLATION INSTRUCTIONS



DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

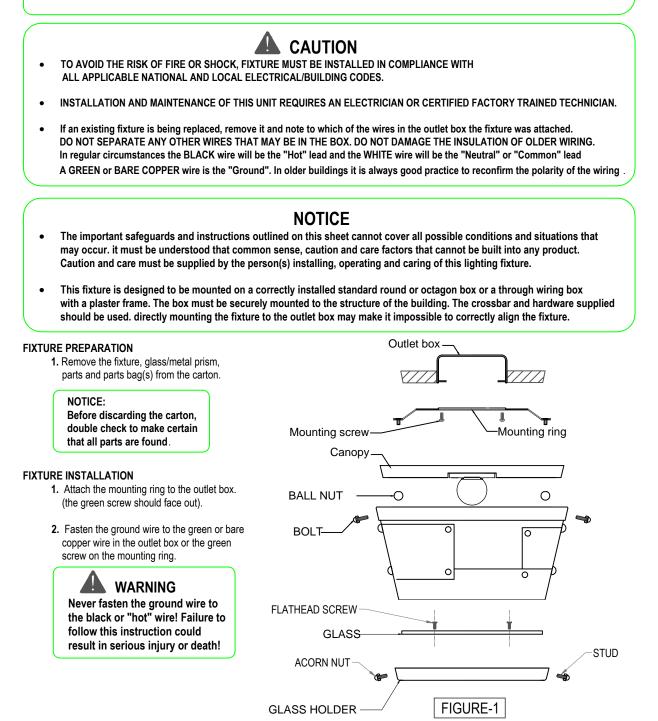

 Fasten the white fixture lead to the white wire in the outlet box. Fasten the wires together with an approved fastener (wire nut). Starting about 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener.

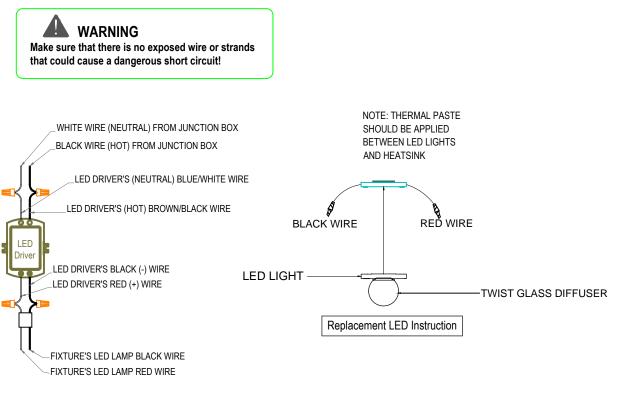

- **4.** Connect the black fixture lead to the black wire in the outlet box. Fasten the joined wires as in step 3.
- 5. Using the ball nut, fasten the canopy to the mounting ring.
- 6. Fasten the fixture to the canopy using the bolt supplied. (See figure-1).
- 7. Put the glass into place.
- 8. Restore power to circuit at breaker or fuse box.

## NOTICE:

Must use a Incandescent Dimmer with LED's on this fixture. \*Lutron Maestro dimmer not compatible.