


WARNING

DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

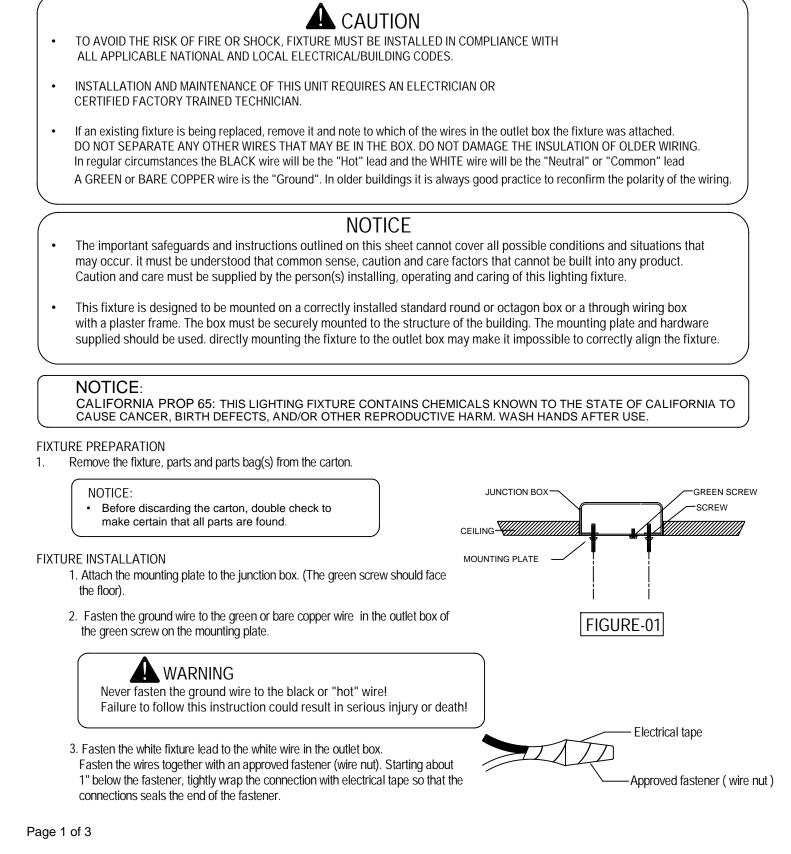


WARNING

Make sure that there is no exposed wire or strands that could cause a dangerous short circuit!

Electrical tape Approved fastener (wire nut)


- 4. Connect the black fixture lead to the black wire in the outlet box. Fasten the joined wires as in step 3.
- 5. Attach the fixture to the junction box and secure it with acorn nut. (See Figure-02)
- 6. Install the lamps. (type-B lamp)





DO NOT EXCEED RECOMMENDED WATTAGE!

7. Restore power to the circuit breaker or fuse box.

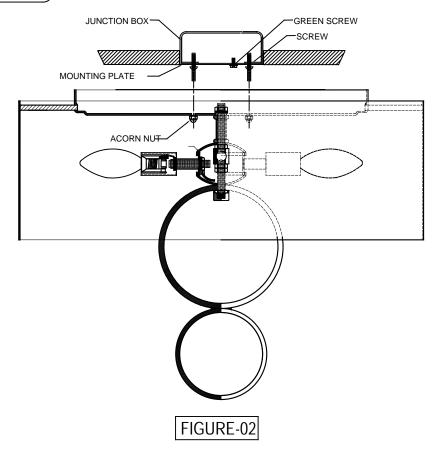

RIVINGTON 4-LTS. FLASH MOUNT R-JG35

ITEM ND, I	PART ND,	DESCRIPTION
1	HRD-C7230	MOUNTING HARDWARF]
2	CPY-C7230	
3	LCK-C7230	LOCK UP
4	CAC-C7230	I SOCKET COVER I
5	ESK-C7230	SOCKET

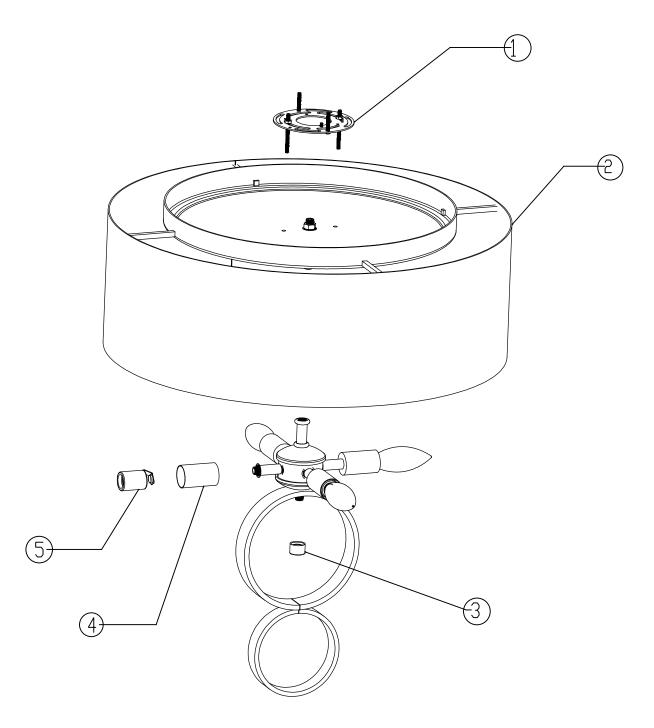


FIGURE-03