
286-716 KIARA EXTRA LARGE FOYER INSTALLATION INSTRUCTIONS



DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.



- 2. Remove the threaded ring from the screw collar loop. Fully thread the screw collar loop onto the nipple. Thread the hex nut onto the nipple and the nipple into the modified heavy duty strap. Place the canopy over the screw collar and against the ceiling. Adjust the nipple so that 1/4" of threads on the screw collar loop extend beyond the canopy. Tighten the hex nut against the modified heavy duty strap. Using the threaded ring, install the canopy. (See Figure 1.)
- 3. Hang the fixture on the chain at the desired height. Remove excess chain and close all links, then attach the chain link to the collar loop. Unscrew the threaded ring from the collar loop. Allow the ring and canopy to slide down the chain to the top of the fixture.

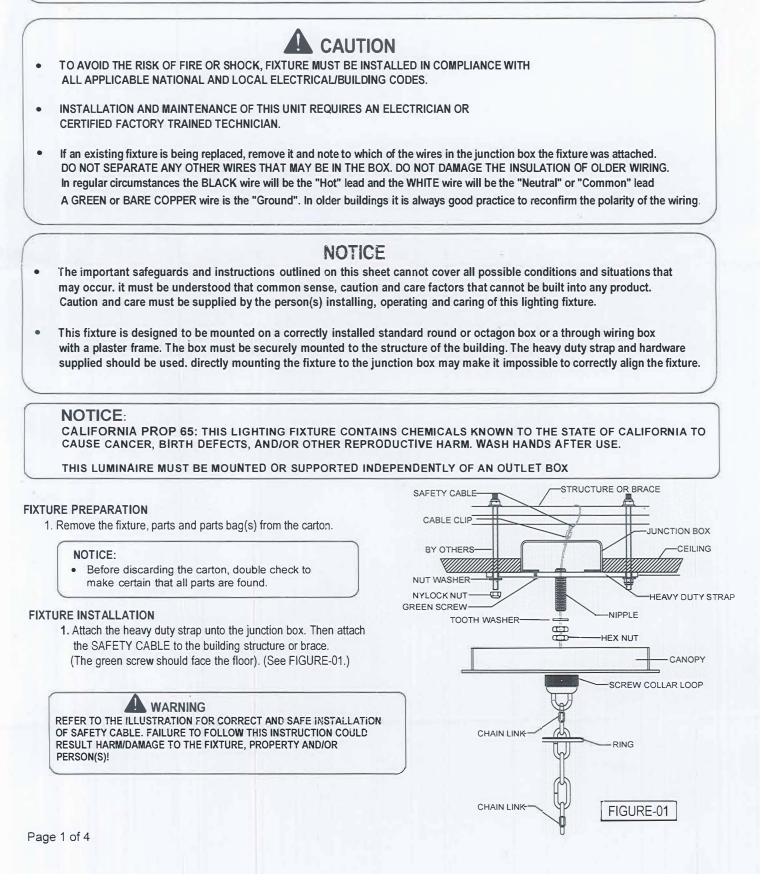

The use of chain pliers for opening and closing chain is required. The use of tools other than the chain pliers may damage the chain link resulting in a failure which causes harm to the fixture, property and/or person!

- **4.** Measure 6" of lead and ground wire beyond the top of the chain. Cutt off excess wire. Strip the insulation off the ends of the leads exposing approx. 1/2" of wire. Twist the strands of wire together. Push the leads and ground wire up through the screwcollar loop and into the junction box.
- 5. Fasten the ground wire to the green or bare copper wire in the junction box of the green screw or the modified heavy duty strap.



Never fasten the ground wire to the white or hot wire! Failure to follow instruction could result in serious injury or death!

6. Fasten the fixture's lead hot wire to hot wire in the junction box. Fasten the wires together with an approved fastener(wire nut). Starting about 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener. NOTE: SPT Hot Wire is the one with the writings.

## WARNING

Make sure that there is no exposed wire or strands that could cause a dangerous short circuit!

Electrical tape

Approved fastener ( wire nut )

7. Connect the fixture lead's neutral wire to the neutral wire in the junction box. Fasten the joined wires as in step 6. NOTE: SPT Cord's Neutral wire does not have any writings on it.

- Secure screw collar loop and nipple by fastening the allen screw. Then slide canopy up the chain and fasten using the threaded ring to the ceiling. (See Figure 02)
- 9. Place the lamps into the socket of the fixture.


NOTICE: This fixture is rated for 40w Type-B.



## DO NOT EXCEED RECOMMENDED WATTAGE!


9. Install accessories to the fixture by placing the glass cover unto the chain, hang the glass at the end of the chains and secure it with glass clip. Then attach the rods along with the glass crystals unto the frame.(See ACCESSORY SCHEDULE) Follow the respective sequence.

**10.** Restore power to the circuit breaker or fuse box.

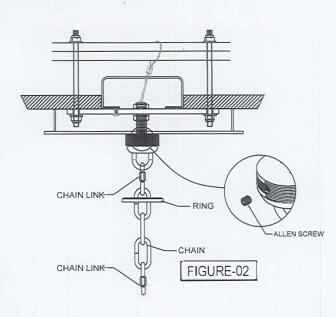

Page 2 of 4


## **KIARA XL FOYER ACCESSORY SCHEDULE**

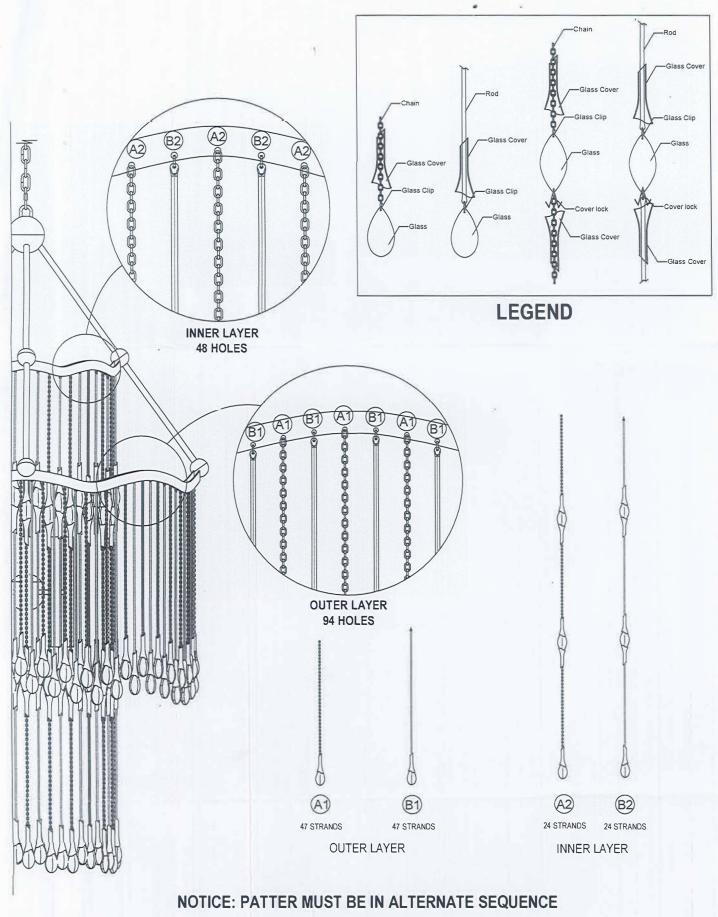

Page 3 of 4

ITEM NO.	PART NUMBER	DESCRIPTION
1	R-LA74-HRD	MOUNTING HARDWARE
2	R-LA74-CPY	CANDPY
3	R-LA74-DLC	SCREW COLLAR LOOP
4	R-LA74-DCH	CHAIN LINK
5	R-LA74-CHN	, CHAIN
6	R-LA74-FRM	FRAME
7	R-LA74-GLS	GLASS
8	R-LA74-ESK	SDCKET
9	R-LA74-CAC	SOCKET COVER

R-LA74 286-716

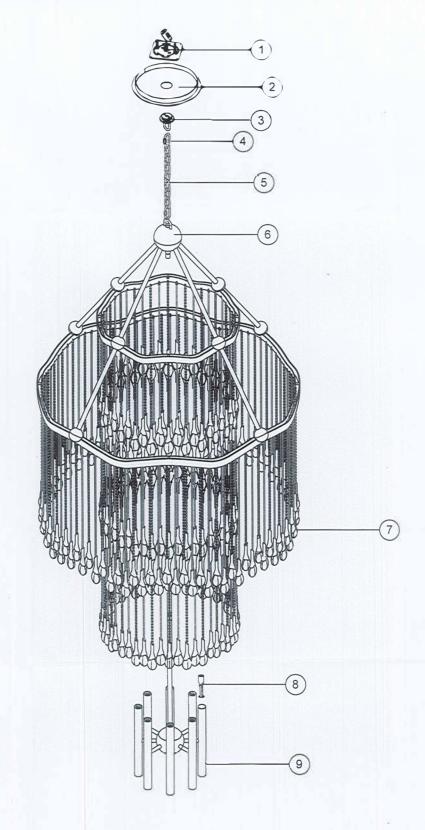

Page 4 of 4