

Lithe

3453, 3454, 3456, 3458
3' Wall Lamp, 4' Wall Lamp,
6' Wall Lamp, 8' Wall Lamp

Lithe

3453, 3454, 3456, 3458

3' Wall Lamp

4' Wall Lamp

6' Wall Lamp

8' Wall Lamp

IMPORTANT

- Always disconnect the power before installing or replacing Luminaires and before cleaning or other maintenance.
- Consult a qualified, licensed electrician to ensure correct branch circuit conductor

Consulter un électricien qualifié pour vous assurer que les conducteurs de la dérivation sont adéquats.

Product Information & Warnings


- Please read all included assembly instructions and warnings carefully before installation. Contact Customer Service if you have any questions or concerns. Before installation, please confirm that the fixture is compatible with your supply voltage and dimming system, if present.
- LEDs are highly sensitive electronic devices, and must be treated with care. Do not open any factory sealed compartments, and avoid touching the LEDs with your hands or any object.
- Although all our fixtures are equipped with protective devices, LED electronic systems are vulnerable to power surges and supply variations. Do not install LED fixtures on the same circuit as any motors, appliances, or HVAC systems.
- Do not remove or bypass any LED Driver or Transformer that is provided with the fixture, and do not replace or substitute with another power supply.
- Fixtures must be wired in parallel on independent leads; do not "daisy chain" multiple fixtures together or wire them in series.
- All factory-made splices and connections must remain intact. LED circuits are carefully designed and built, and improper connections may damage the fixture.
- The ends of coaxial pendant cords have been precisely stripped and split at the factory and must not be field cut. Excess cord or cable should be neatly coiled and reserved in the fixture canopy.
- Any mounting hardware is provided for your convenience and should be used with discretion. Always use the appropriate hardware for the mounting surface.

Assembly Instructions

Instructions D'Installation


SONNEMAN®
A WAY OF LIGHT

1. Note: This fixture must be installed with its power supply in a remote, accessible location in accordance with local electrical code.
2. Shut off power to the branch circuit.
3. Loosen the set screws (D) in the main fixture body (A) and remove the mounting plate (C).
4. Determine the fixture location and drill a 1/2" hole (E) at the centerpoint of the fixture.
5. Install the power supply (B) in a remote and accessible location near the fixture location in accordance with local electrical code (Fig. 1). Make appropriate electrical connections:
 - a) Connect the power supply's live wire to the live supply wire.
 - b) Connect the power supply's neutral wire to the neutral supply wire.
 - c) Connect the power supply's positive (+) output to the necessary length of red wire (not included) to reach the fixture location.
 - d) Connect the power supply's negative (-) output to the necessary length of black wire (not included) to reach the fixture location
6. Feed the red and black extension wires through the drilled hole (E).
7. Using drywall anchors and screws, or other appropriate hardware, attach the mounting plate (C) to the wall so that the center hole of the mounting plate coincides with the drilled hole (E). Feed extension wires through the mounting plate.
8. Make fixture connections:
Dry location: using the included wire nuts, connect the red (+) wire to the fixture's positive (red) conductor and the black (-) wire to the fixture's negative (black) conductor. Carefully insert the connections and any excess wire into the wall through the drilled hole (E).
Wet location: using the included butt-splice connectors, connect the red (+) wire to the fixture's positive (red) conductor and the black (-) wire to the fixture's negative (black) conductor. Carefully insert the connections and any excess wire into the wall through the drilled hole (E). Seal the hole with silicone or similar sealant.
9. Fit the main fixture body (A) over the mounting plate (C). Tighten the set screws (D) to secure the fixture in place.
10. Restore power to the branch circuit.

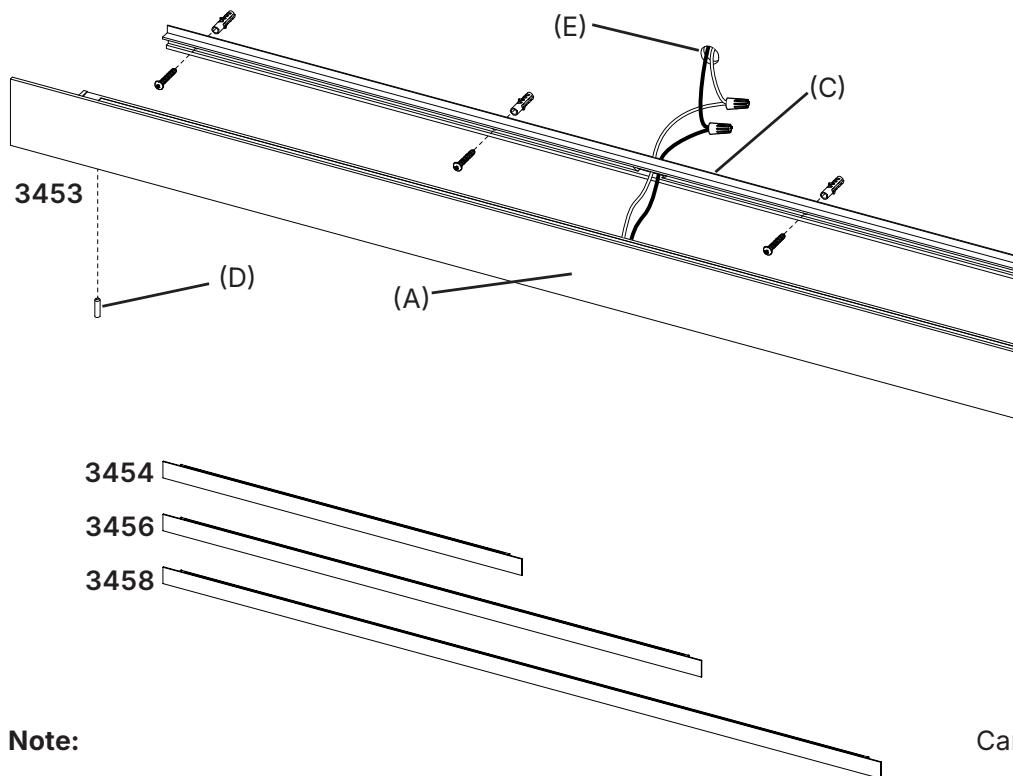

Note:

This fixture is dimmable with Electronic Low Voltage (Trailing-Edge) type dimmers, Incandescent (Leading Edge) type dimmers, and 0-10V type dimmers only.

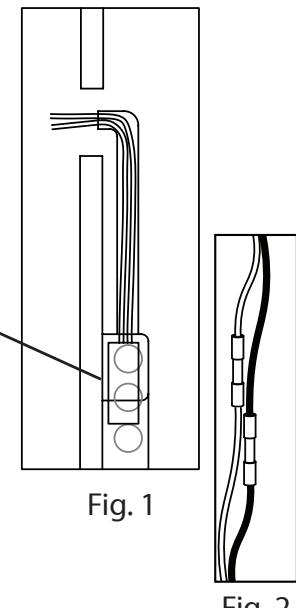

Care Instructions:

Use a clean, dry cloth when dusting. To protect the finish, avoid any harsh abrasives or chemicals.